



# Assembly Instructions

## Sonas 8 Seat Rectangular Set

(Product Codes: 69103062, 69102062, 69102018)

**PLEASE RETAIN THIS DOCUMENT ALONG WITH YOUR  
PROOF OF PURCHASE FOR FUTURE REFERENCE**

Congratulations on your recent purchase of your beautiful Hartman furniture. We hope it brings you countless special moments with friends and family for many years to come.

Please follow these simple steps to build your furniture. We also have a very useful video available online to assist with the assembly, please visit [www.hartmanuk.com](http://www.hartmanuk.com)

### TOP TIPS

- Please read these instructions carefully before assembly, for further assistance please view our assembly video online for an easy step by step demonstration.
- Aluminium is a soft metal and over tightening may strip the thread or break the part, please loosely assembly your furniture before tightening to secure.
- Please **do not** use power tools, only use the tools provided in the bolt pack.
- Please allow 1 hour for assembly.
- This furniture can be assembled with **1** person; however, you may need someone to assist you when turning the furniture over into position.



# Assembly Instructions

## **Sonas 8 Seat Rectangular Dining Table (69103062)**



|                                                                                                     |
|-----------------------------------------------------------------------------------------------------|
| <p><b>PLEASE RETAIN THIS DOCUMENT ALONG WITH YOUR PROOF<br/>OF PURCHASE FOR FUTURE REFERENE</b></p> |
|-----------------------------------------------------------------------------------------------------|

Congratulations on your recent purchase of your beautiful Hartman furniture. We hope it brings you bountiful special moments with friends and family for many years to come. Please follow these simple steps to build your furniture. We also have a very useful video available online to assist with the assembly, please visit [www.hartmanuk.com](http://www.hartmanuk.com)


### **TOP TIPS**

- Please read these instructions carefully before assembly. For further assistance please view our assembly video online for an easy step by step demonstration.
- Aluminium is a soft metal and over tightening may strip the thread or break the part, please loosely assemble your furniture before tightening to secure.
- Please **do not** use power tools, please only use the tools provided in the bolt pack.
- Please allow 1 hour for assembly.
- This furniture can be assembled with 1 person; however, you may need someone to assist you when turning the furniture over into position.

PARTS LIST

| Components |                                                                                   |             |     |           | Fixings    |                                                                                       |                        |     |          |
|------------|-----------------------------------------------------------------------------------|-------------|-----|-----------|------------|---------------------------------------------------------------------------------------|------------------------|-----|----------|
| Parts List | Parts Picture                                                                     | Description | Qty | Part No.  | Parts List | Parts Picture                                                                         | Description            | Qty | Part No. |
| A          |  | Table Leg   | 2   | 69103062A | C          |    | Washer (M6x $\phi$ 16) | 14  | 1061166  |
| B          |  | Table Top   | 1   | 69103062B | D          |     | Bolt M6x20             | 12  | 1091162  |
|            |                                                                                   |             |     |           | E          |     | Bolt M6x40             | 2   | 1121162  |
|            |                                                                                   |             |     |           | F          |    | Bolt Cap               | 14  | 1061163  |
|            |                                                                                   |             |     |           | G          |     | M6 Allen Key           | 1   | 1010162  |
|            |                                                                                   |             |     |           | H          |  | Foot Pad               | 4   | 2PNSF001 |


## STEP 1 & 2: LEGS ASSEMBLY

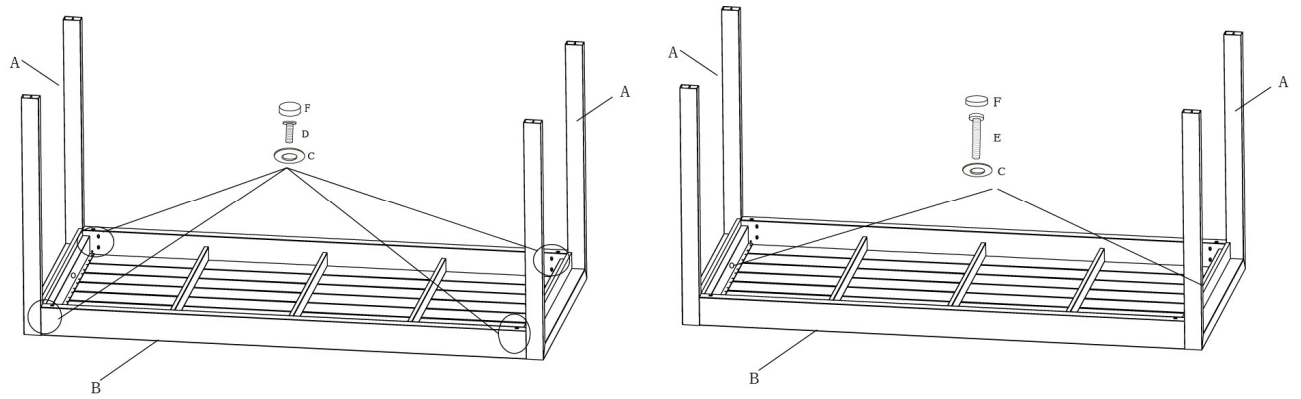

**STEP 1:** Attach leg (A) to the table top (B) using the M6x20 bolt (D) and washer (C)

**STEP 2:** Then using the M6x40 bolt (E) and washer (C)

## STEP 3: TIGHTEN AND FINISHING

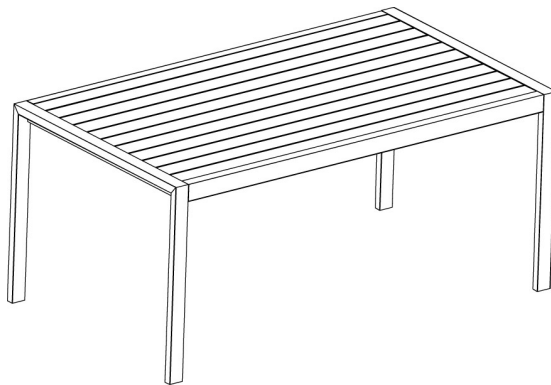

**STEP 3:** Finally tighten all the bolts and add the bolt caps (F) to the bolts.



# Assembly Instructions

## **Sonas Dining Chair (69102062 / 69102018)**

**PLEASE RETAIN THIS DOCUMENT ALONG WITH YOUR  
PROOF OF PURCHASE FOR FUTURE**




Congratulations on your recent purchase of your beautiful Hartman furniture. We hope it brings you countless special moments with friends and family for many years to come.

Please follow these simple steps to build your furniture. We also have a very useful video available online to assist with the assembly, please visit [www.hartmanuk.com](http://www.hartmanuk.com)


### **TOP TIPS**

- Please read these instructions carefully before assembly, for further assistance please view our assembly video online for an easy step by step demonstration.
- Aluminium is a soft metal and over tightening may strip the thread or break the part, please loosely assembly your furniture before tightening to secure.
- Please **do not** use power tools, only use the tools provided in the bolt pack.
- Please allow 1 hour for assembly.
- This furniture can be assembled with **1** person; however, you may need someone to assist you when turning the furniture over into position

PARTS LIST

| Components |                                                                                     |                 |     |                        | Fixings    |                                                                                      |                     |     |          |
|------------|-------------------------------------------------------------------------------------|-----------------|-----|------------------------|------------|--------------------------------------------------------------------------------------|---------------------|-----|----------|
| Parts List | Parts Picture                                                                       | Description     | Qty | Part No.               | Parts List | Parts Picture                                                                        | Description         | Qty | Part No. |
| A          |    | Seat Frame      | 1   | 69102062A<br>69102018A | G          |   | Washer<br>(M6*φ16)  | 8   | 1061162  |
| B          |    | Armrest 1       | 1   | 69102062B<br>69102018B | H          |    | M6x35<br>Bolt       | 6   | 1111162  |
| C          |    | Armrest 2       | 1   | 69102062C<br>69102018C | I          |   | Plastic<br>Bolt Cap | 8   | 1061163  |
| D          |    | Back Rest       | 1   | 69102062D<br>69102018D | J          |    | M6<br>Allen Key     | 1   | 1010162  |
| E          |    | Back<br>Cushion | 1   | 69102062E<br>69102018E | K          |    | M6x55<br>Bolt       | 2   | 1641162  |
| F          |  | Seat<br>Cushion | 1   | 69102062F<br>69102018F | L          |  | Footpad             | 4   | 2PIF002  |


## STEP 1 & 2: ARMREST ASSEMBLY

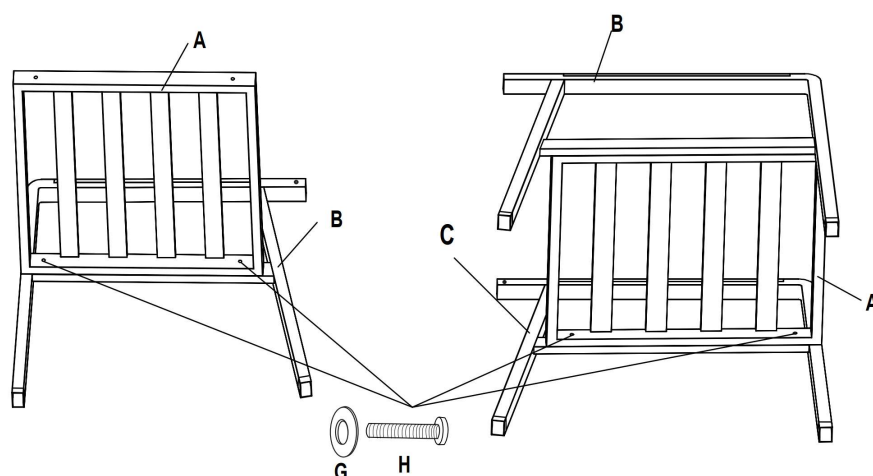

**STEP 1:** Attach Armrest 1 (B) to the Seat frame (A) using the M6x35 Bolt (H) and Washer (G)

**STEP 2:** Repeat step 1 with Armrest 2 (C)


## STEP 3 & 4: BACKREST ASSEMBLY

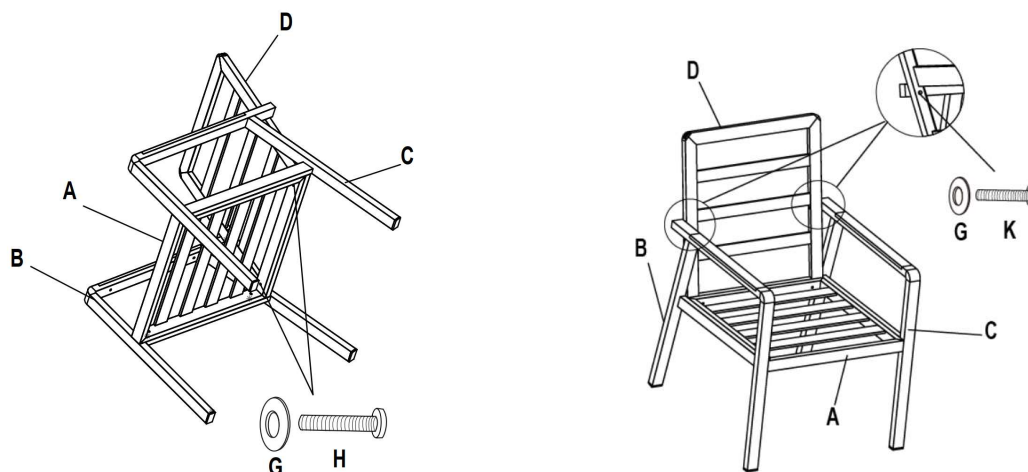

**STEP 3:** Attach Back Rest (D) to the Seat Frame (A) using the M6x35 Bolt (H) and Washer (G)

**STEP 4:** Attach Back rest (D) to the Armrest 1 (B) & Armrest 2 (C) using the M6x55 Bolt (K) and Washer (G)

## STEP 5: TIGHTENING AND FINISHING

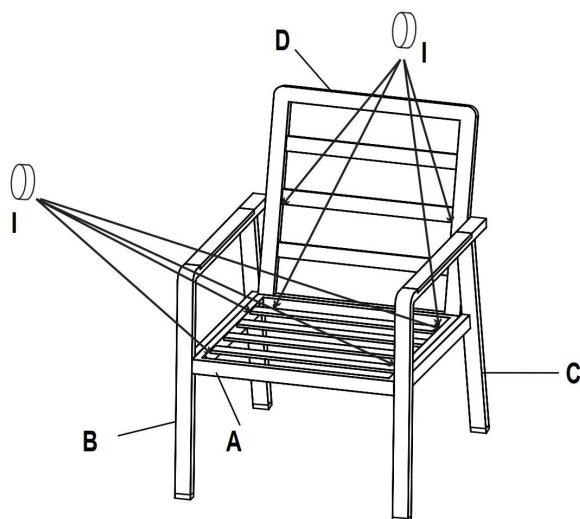

**STEP 5:** Tighten all the bolts on the chair and cover with the Plastic bolt cap (I).  
Turn the chair over and place the Seat cushion (F) and the Back cushion (E) onto the chair